
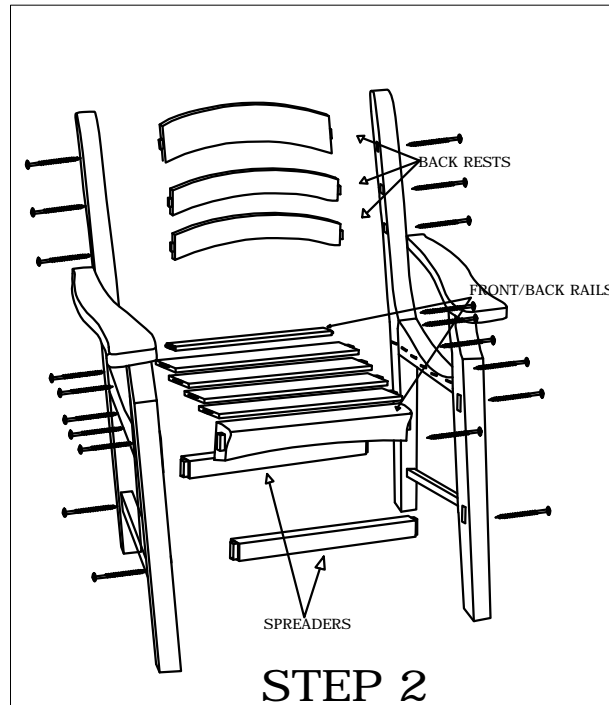


# AVANTI DINING ARM CHAIR



# BREEZESTA<sup>tm</sup>

## AV-0601

## Recycled Poly Furniture

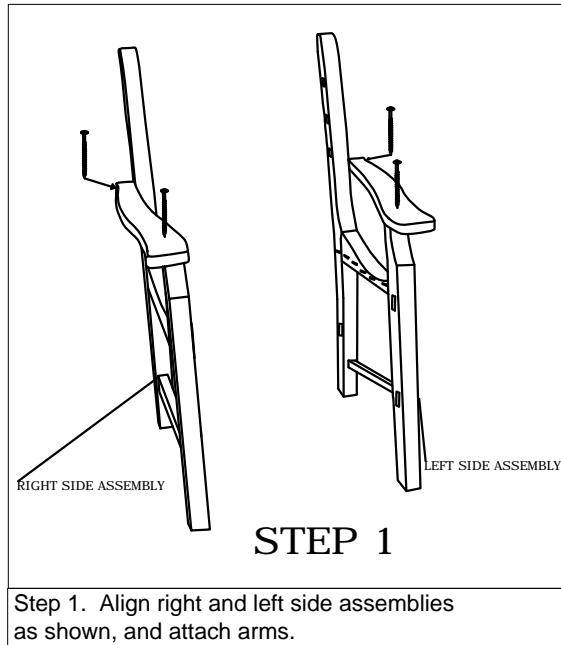

Step 2. Place spreaders into mortise (pocket) inside assemblies as shown. Loosely attach with screws "A." Follow this procedure with rails and slats, followed by back rests.

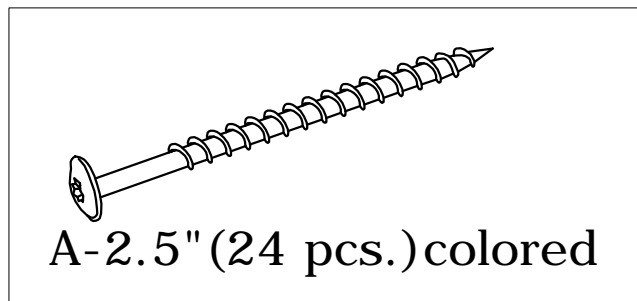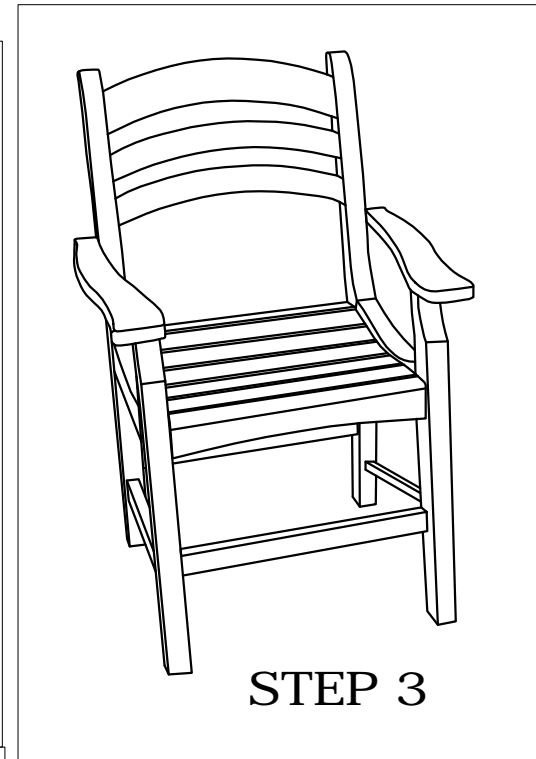

### LIST OF PARTS

- Right Side (1)
- Left Side (1)
- Slats (5)
- Spreaders (2)
- Arms (1R) (1L)
- Front Rail (1)
- Back Rail (1)
- Back Rests (3)
- Colored Screws "A" (24)
- Insert Bit Tool (1)