



# Piedmont Lounge Chair

PT-0500


**BREEZESTA** tm  
Recycled Poly Furniture

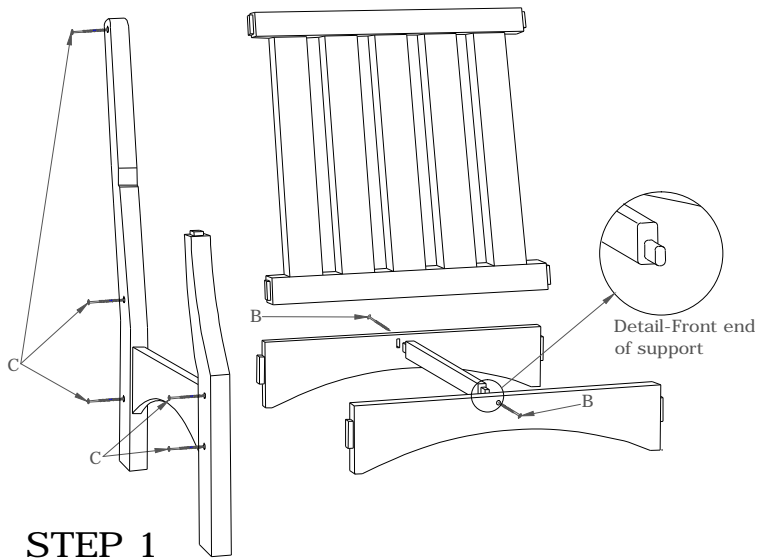

Using the detail in the drawing above, place the tenon on the center support into the slot on the front and back spreaders. Attach with screws "B". Lay the right side assembly on the floor with the pockets face up. Insert the Spreader into the pockets as shown. Insert the back assembly into the pockets as shown. Stand assembly up and attach with screws "C" as shown.

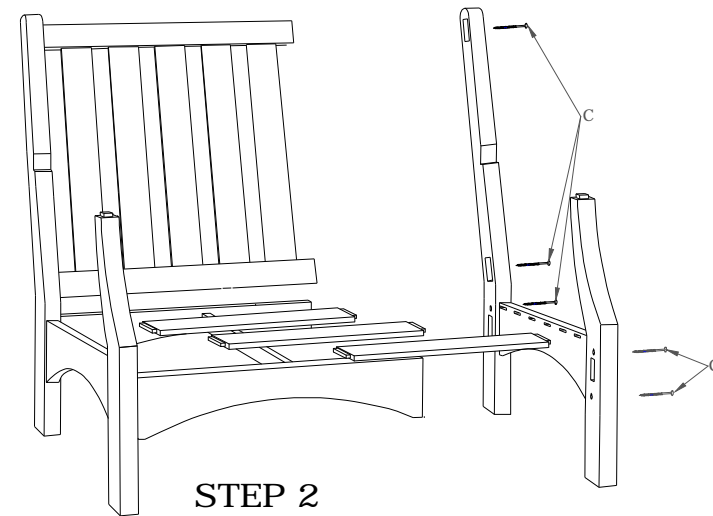


Lay the chair assembly back on its right side. Insert the slats into the pockets on the side assembly. Fit the left side assembly onto the Back Assembly and Slats, aligning the mortise and tenon joint. Attach with screws "C"

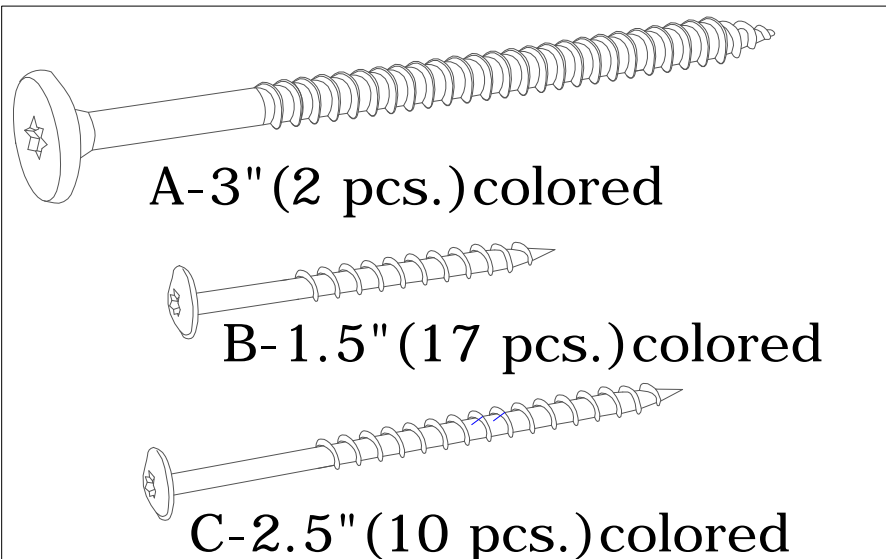

## LIST OF PARTS

- Side Assemblies (1 right, 1 left)
- Arm Rest (1 right, 1 left)
- Front / Back Spreaders (2)
- Support Brace (1)
- Back Assembly (1)
- Seat Slats (6)
- Colored Screws "A" (2)
- Colored Screws "B" (17)
- Colored Screws "C" (10)
- Insert Bit Tool (1)

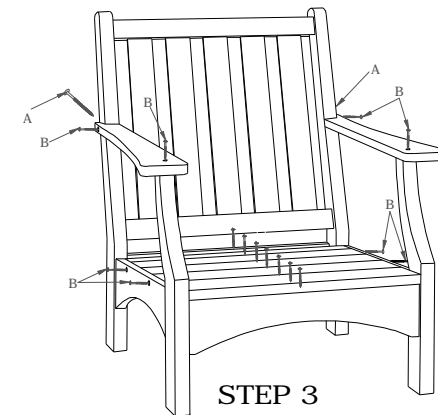

Attach slats on both sides and seat with screws "B". Place the Arm Rest as shown and attach the top and sides with screws "B" and through the back with screw "A"